


Formulate Monolith 600mm

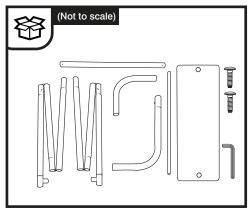


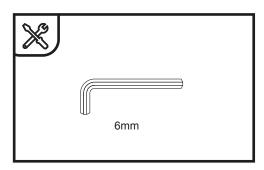


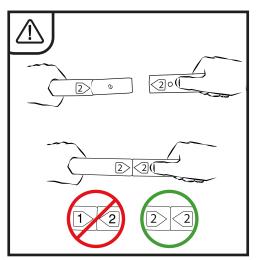






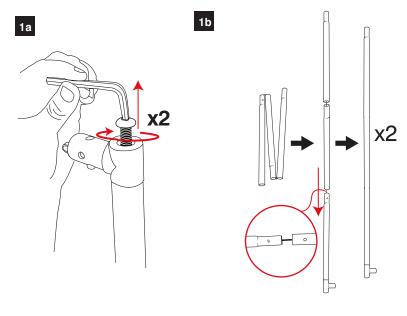


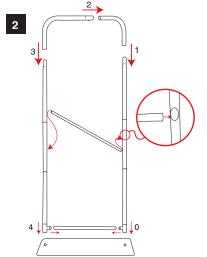



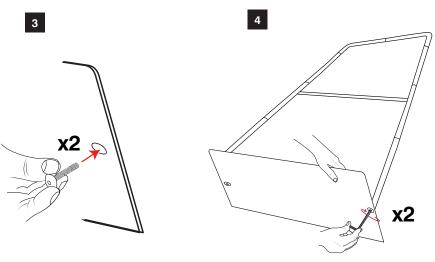




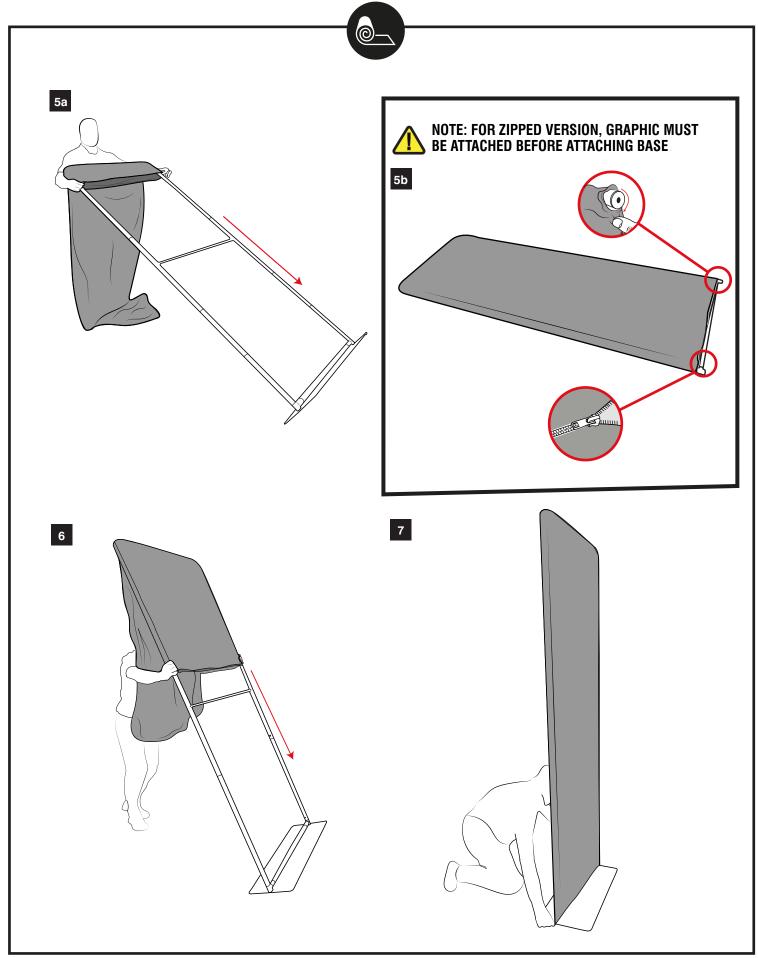



Formulate Monolith 900mm






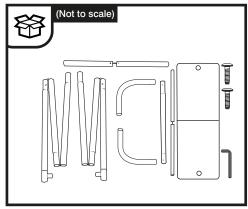


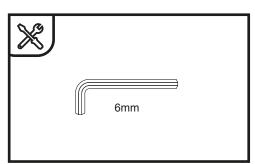


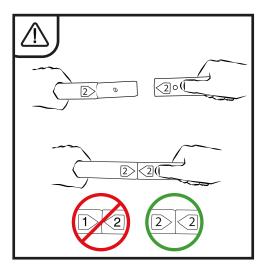

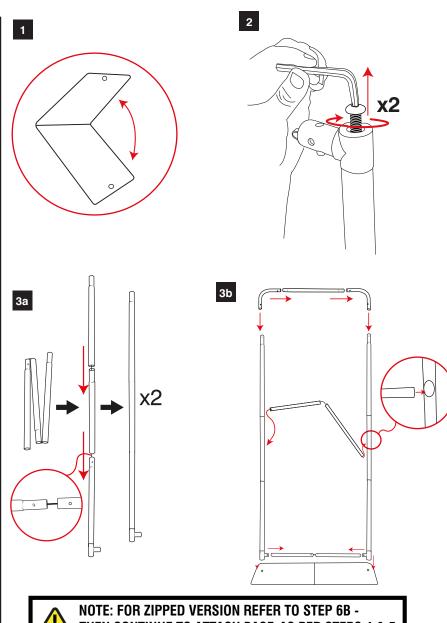


NOTE: FOR ZIPPED VERSION REFER TO STEP 6B - THEN CONTINUE TO ATTACH BASE AS PER STEPS 4 & 5

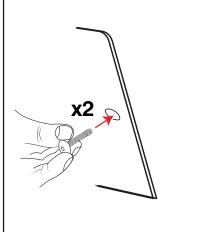

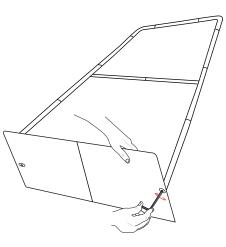

Formulate Monolith 900mm




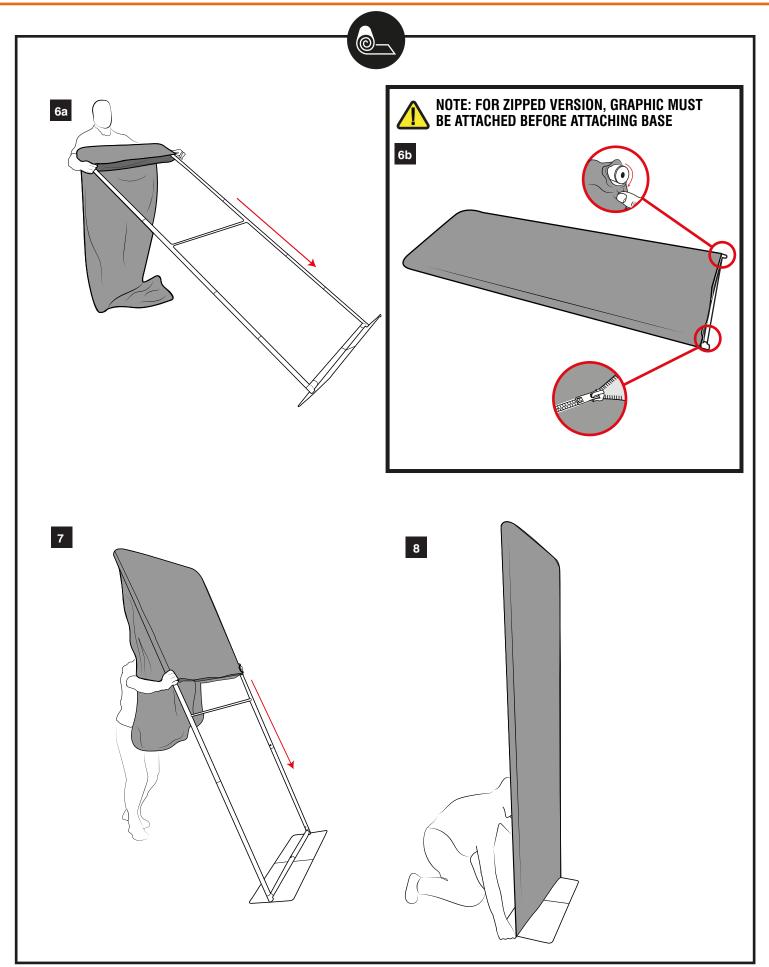



Formulate Monolith 1200mm







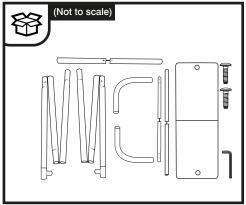


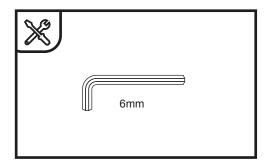

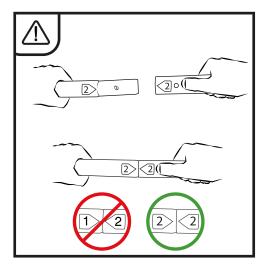


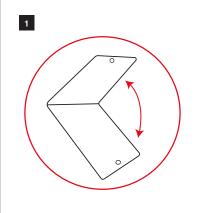

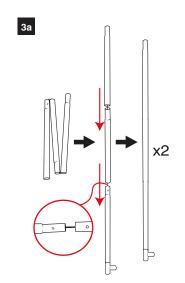

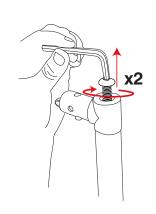



2

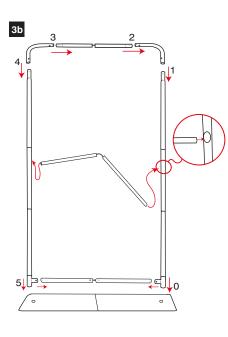




NOTE: FOR ZIPPED VERSION REFER TO STEP 6B - THEN CONTINUE TO ATTACH BASE AS PER STEPS 4 & 5

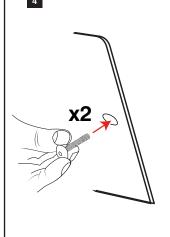

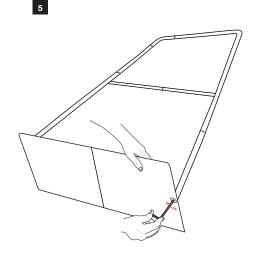

Formulate Monolith 1200mm




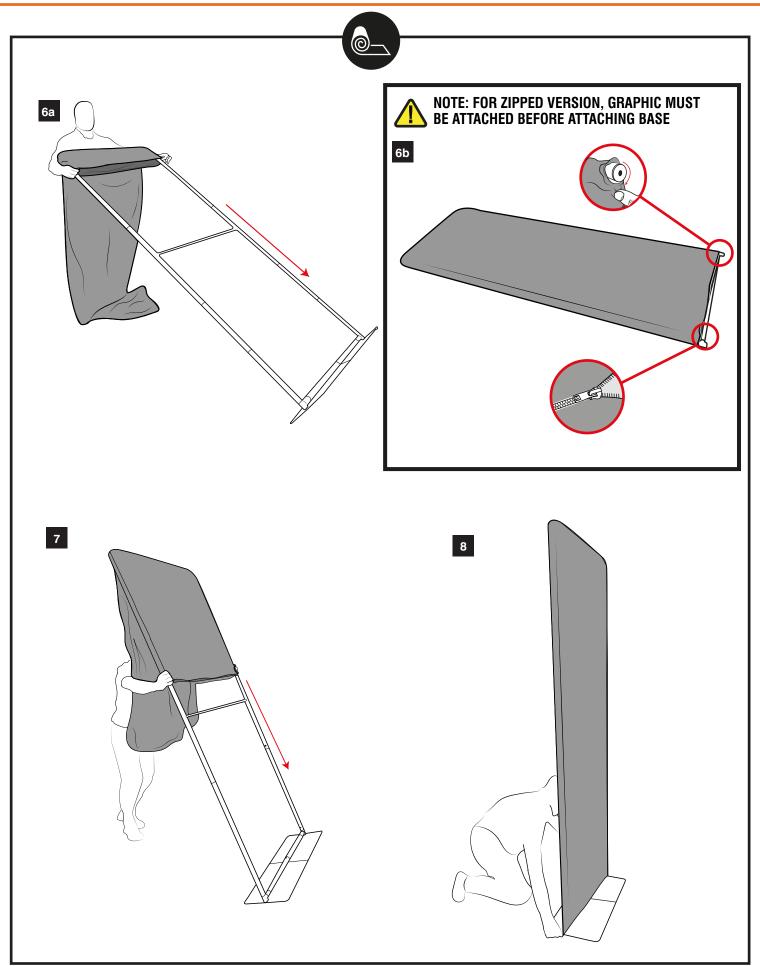



Formulate Monolith 1500mm







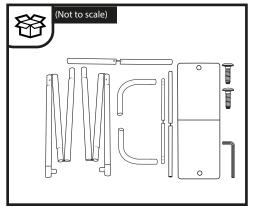


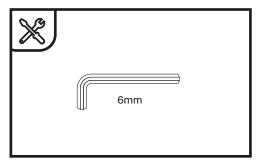


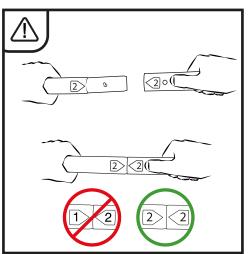

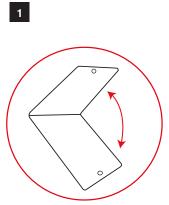

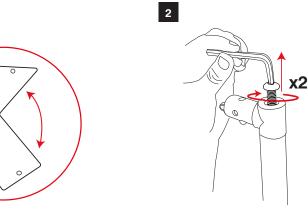


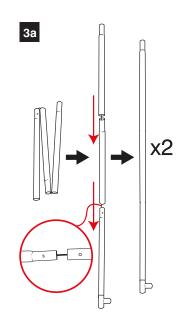


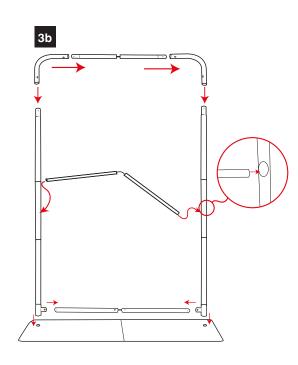



NOTE: FOR ZIPPED VERSION REFER TO STEP 6B -THEN CONTINUE TO ATTACH BASE AS PER STEPS 4 & 5

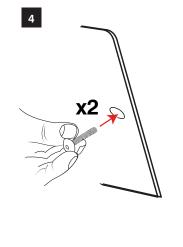

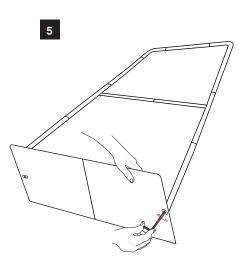

Formulate Backwall 1500mm



